


Assembly Non-Trafficable


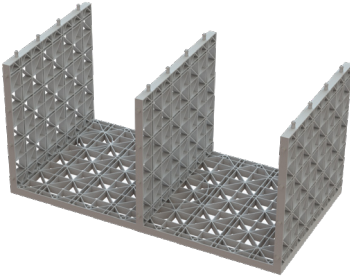


STEP 1:

Place 1 (One) Large Panel onto a firm flat surface. Insert 3 (Three) small panels with the 400mm side (side with long pins) into the large panel. Use a rubber mallet to lightly tap the panels together at every stage.


STACKING MODULES:

Assemble 1 complete module. For every module to be stacked on top, stop at Step 3. Connect 'Step 3' module on to roof of module below.

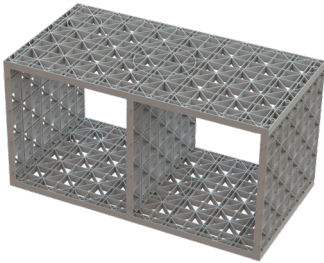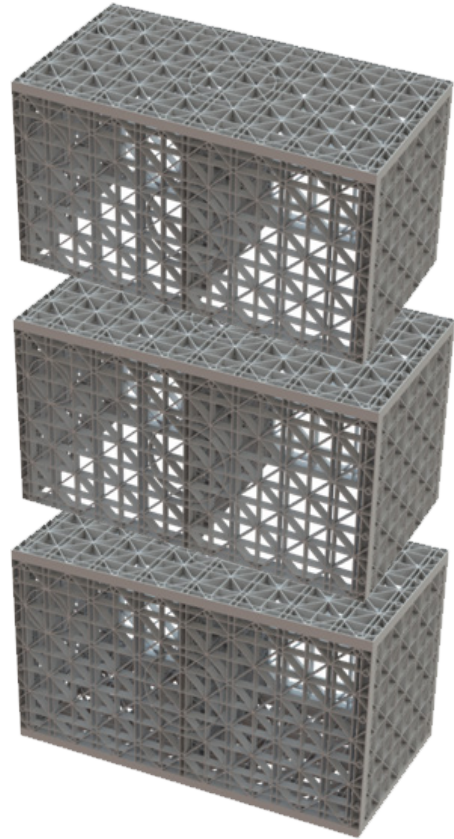

STEP 2:

Place a large panel on to the top of the small panels and lightly tap together.

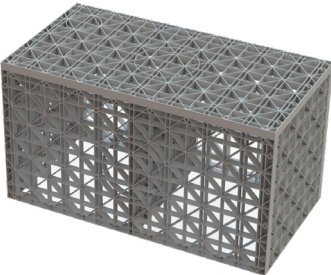


STEP 3:

Turn module over, place a large panel on to the top and lightly tap together.

MODULE ORIENTATION:

When correctly assembled, the Drainwell module should be 755mm (Long) x 400mm (Wide) x 440mm (High). It is very important that the modules are installed the correct way up. IE. 440mm high.

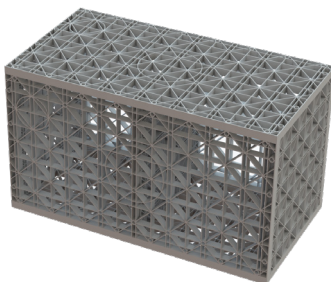

STEP 4:

Turn module over, place final panel on to the top and lightly tap together.

